



After hours air-conditioning instructions

- 1 Press  one time to start the air conditioning for 60 min.
- 2 Press  the one time to increase the time to 120 min.
- 3 During the afterhours running mode the time remaining will be shown in minutes.
- 4 Whenever the air-conditioning is running the green light on the zone sensor will be illuminated.

